

Fault overview

Fault code	Fault text	Fault effect
1	Airbag warning light	Fault memory The warning light is activated
2	Airbag warning light	Fault memory The warning light is activated
3	Supply voltage	Fault memory The warning light is on as long as the limit value is exceeded or not reached.
4	Ignition circuit, driver	Fault memory/warning light
5	Ignition circuit, driver	Fault memory/warning light
6	Driver's seat belt tensioner	Fault memory/warning light
7	Driver's seat belt tensioner	Fault memory/warning light
8	Passenger's seat belt tensioner	Fault memory/warning light
9	Passenger's seat belt tensioner	Fault memory/warning light
10	Ignition circuit, passenger	Fault memory/warning light
11	Ignition circuit, passenger	Fault memory/warning light
12	Ignition circuit, side airbag	Fault memory/warning light
13	Ignition circuit, side airbag	Fault memory/warning light
14	Ignition circuit, side airbag	Fault memory/warning light
15	Ignition circuit, side airbag	Fault memory/warning light
20	Ignition circuit, driver	Fault memory/warning light
21	Ignition circuit, driver	Fault memory/warning light
22	Driver's seat belt tensioner	Fault memory/warning light
23	Driver's seat belt tensioner	Fault memory/warning light
24	Passenger's seat belt tensioner	Fault memory/warning light
25	Passenger's seat belt tensioner	Fault memory/warning light
26	Ignition circuit, passenger	Fault memory/warning light
27	Ignition circuit, passenger	Fault memory/warning light
28	Ignition circuit, side airbag	Fault memory/warning light
29	Ignition circuit, side airbag	Fault memory/warning light
30	Ignition circuit, side airbag	Fault memory/warning light
31	Ignition circuit, side airbag	Fault memory/warning light
36	Ignition circuit, driver	Fault memory/warning light
37	Driver's seat belt tensioner	Fault memory/warning light
38	Passenger's seat belt tensioner	Fault memory/warning light
39	Ignition circuit, passenger	Fault memory/warning light

Fault code	Fault text	Fault effect
40	Ignition circuit, side airbag	Fault memory/warning light
41	Ignition circuit, side airbag	Fault memory/warning light
44	Belt buckle, driver	Fault memory/warning light
45	Belt buckle, driver	Fault memory/warning light
46	Belt buckle, driver	Fault memory/warning light
47	Belt buckle, passenger	Fault memory/warning light
48	Belt buckle, passenger	Fault memory/warning light
49	Belt buckle, passenger	Fault memory/warning light
50	Belt buckle, driver	Fault memory The warning light is on as long as the limit value is exceeded or not reached.
51	Belt buckle, passenger	Fault memory The warning light is on as long as the limit value is exceeded or not reached.
53	Side airbag sensor (airbag sensor)	Fault memory/warning light
56	Side airbag sensor (airbag sensor)	Fault memory/warning light
70	Child seat detection	Fault memory/warning light
71	Child seat detection	Fault memory
72	Child seat detection	Fault memory/warning light
73	Child seat detection	Fault memory/warning light
85	Side airbag sensor (airbag sensor)	Fault memory/warning light
86	Side airbag sensor (airbag sensor)	Fault memory/warning light
87	Side airbag sensor (airbag sensor)	Fault memory/warning light
88	Side airbag sensor (airbag sensor)	Fault memory/warning light
Fault codes \geq 100	xxx (depending on the fault code)	Fault memory/ warning light The fault cannot be erased and the airbag triggering unit is faulty