

## Basic setting, initiating

### **Note:**

*The basic setting should be initiated after performing the following repairs:*

- ◆ *Exchanging engine*
  - ◆ *Replacing Engine Control Module (ECM)*
  - ◆ *Replacing/altering throttle valve*
  - ◆ *Adjusting throttle valve (setting idling speed).*
  - ◆ *Replacing Throttle Position (TP) Sensor - G69-*
  - ◆ *Altering Throttle Position (TP) Sensor -G69-setting*
  - ◆ *Replacing Transmission Control Module (TCM) -J217-*
- Connect Scan Tool VAG 1551 and enter address word "02 Transmission electronics" and advance until "Select function XX" appears in the display ⇒ [page 01-22](#) .

**Rapid data transfer**

**HELP**



Indicated on display:

**Select function XX**

- Press keys 0 and 4. (The function "Initiating basic setting" is selected with 04).

**Note:**

*Accelerator Pedal must remain in Closed Throttle Position.*

Rapid data transfer

Q



Indicated on display:

04 Basic setting

- Confirm entry with key Q.

Basic setting

HELP



Indicated on display:

Enter display group number XX

- Press keys 0 and 0.
- Confirm entry with key Q.

System in basic setting

0 →



Indicated on display:

The system is now in basic setting.

- Depress Accelerator Pedal as far as kickdown and hold in this position for 3 seconds.
- Press key → .

Rapid data transfer

HELP



Indicated on display:

Select function XX